
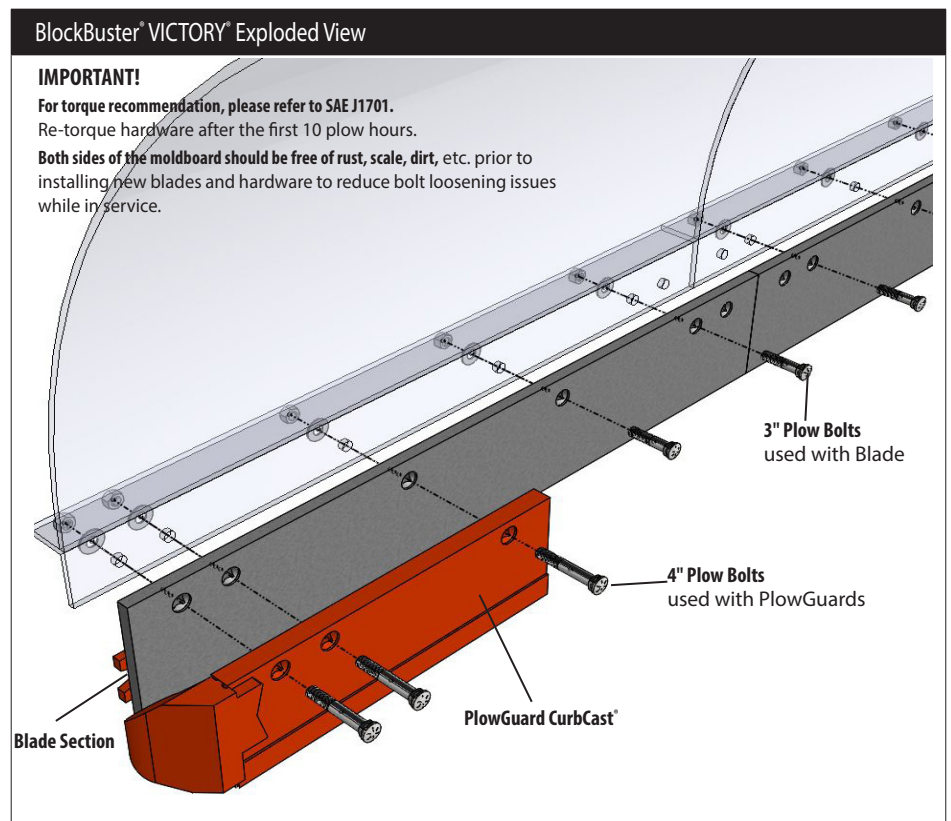


# BLOCKBUSTER® VICTORY® SNOWPLOW BLADE SYSTEM


## INSTALLATION GUIDE

BlockBuster® VICTORY® System
3 – BlockBuster® VICTORY® Blade Sections (3' or 4')
2 – PlowGuards
1 – Plow Bolt Kit (may contain extra hardware)
12 – 3" Plow Bolts (Blade assembly)
6 – 4" Plow Bolts (PlowGuard assembly)
18 – Stover Lock Nuts
18 – Conical Washers

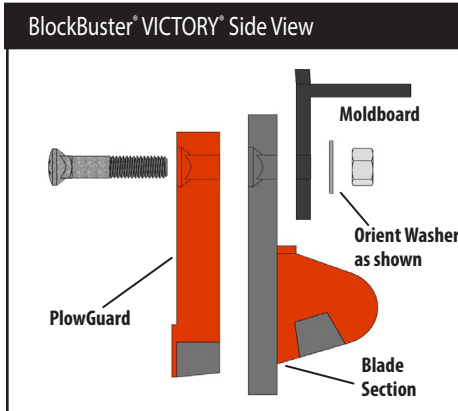


**IMPORTANT!**  
For torque recommendation, please refer to SAE J1701.  
Re-torque hardware after the first 10 plow hours.  
Both sides of the moldboard should be free of rust, scale, dirt, etc. prior to installing new blades and hardware to reduce bolt loosening issues while in service.


### 12' BlockBuster® VICTORY® Setup





### 11' BlockBuster® VICTORY® Setup



### 10' BlockBuster® VICTORY® Setup



### 9' BlockBuster® VICTORY® Setup

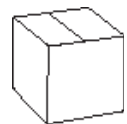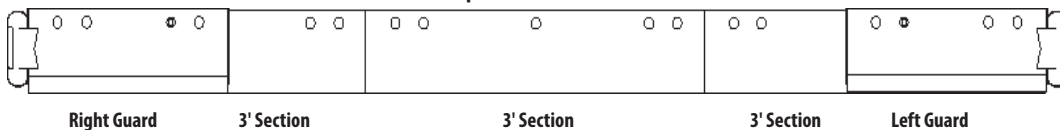

Plow Bolt Kit  
Included With Every System



Questions? 1-800-294-6837 or [WinterEquipment.com](http://WinterEquipment.com)