
INSTALLATION INSTRUCTIONS

RoadMAXX® Cutting Edge System

PARTS INCLUDED

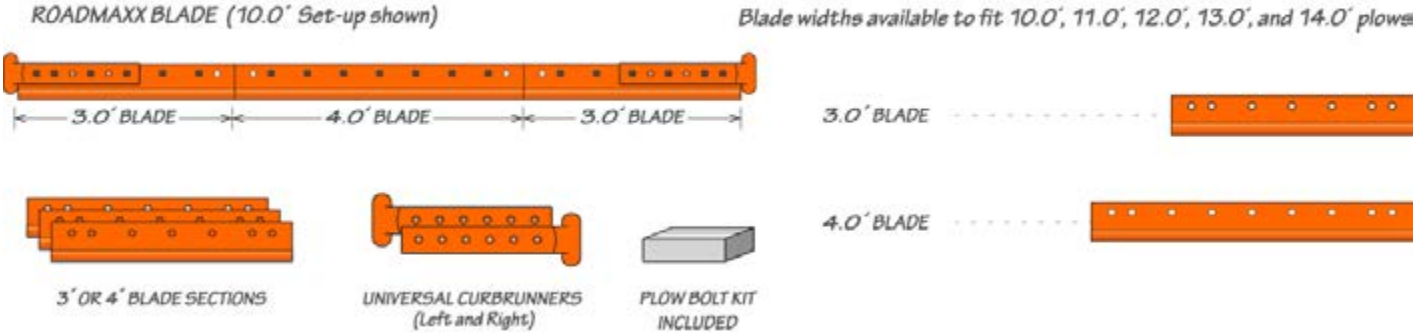


IMPORTANT!

The moldboard mounting surface must be clean of all foreign material prior to installing new blades and hardware to avoid issues with bolt loosening while in service.

- For torque recommendation, please refer to SAE J1701
- Re-torque hardware after the first 10 plow hours


Step 1

Clear moldboard of all foreign material before mounting RoadMAXX® blade sections with the 3" plow bolts in the provided mounting hardware kit. Leave the outside bolt holes empty for Step 3.

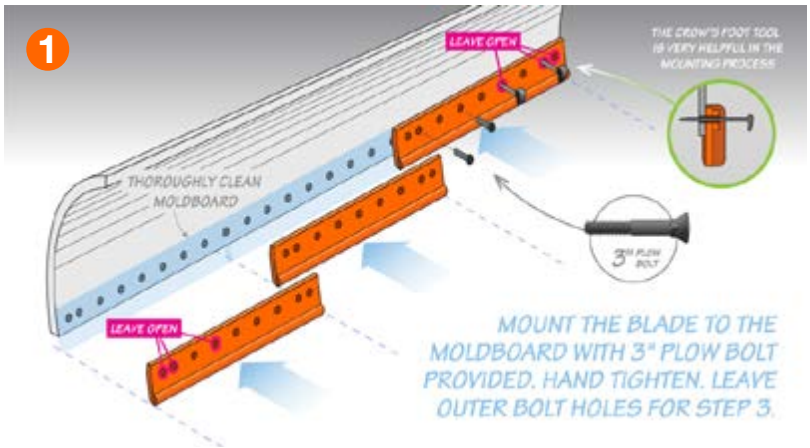


Step 2

Install center and passengers-side RoadMAXX® sections. Leave the last four bolt holes empty for Step 3.

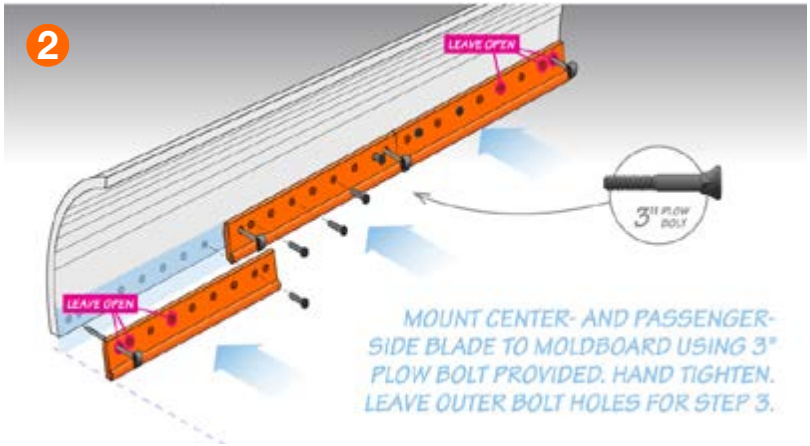

Step 3


Install Universal CurbRunner® curb guards on plow ends with 3.5" plow bolts included.

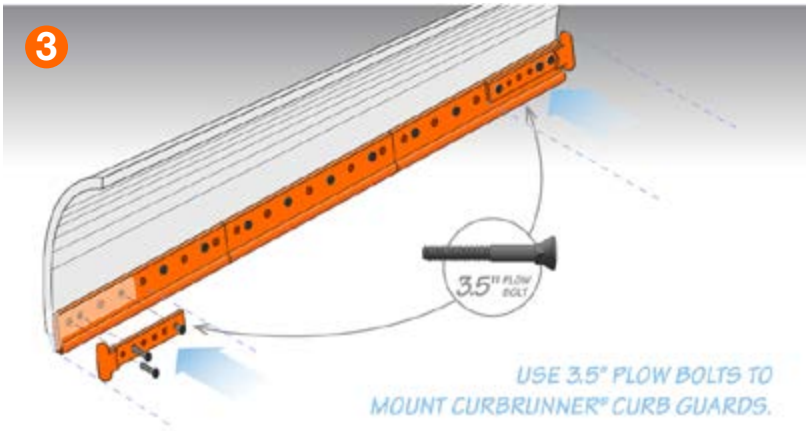

Step 4

Set entire assembly on ground to ensure it's level.

Fully tighten all bolts. For torque specification, please refer to SAE J1701.

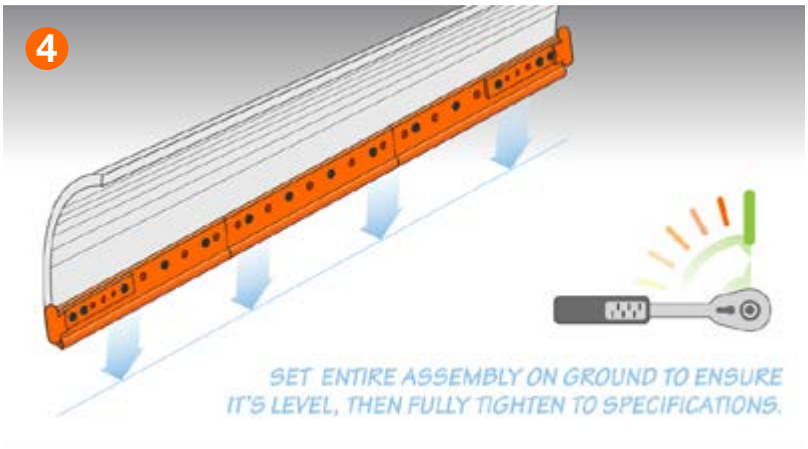

Re-torque hardware after the first 10 plow hours

WARNING!

Enclosed hardware package must be utilized or the WARRANTY is invalid