

INSTALLATION INSTRUCTIONS

Vulcan for 9'2" BOSS DXT V-Plow Cutting Edge System

PARTS INCLUDED

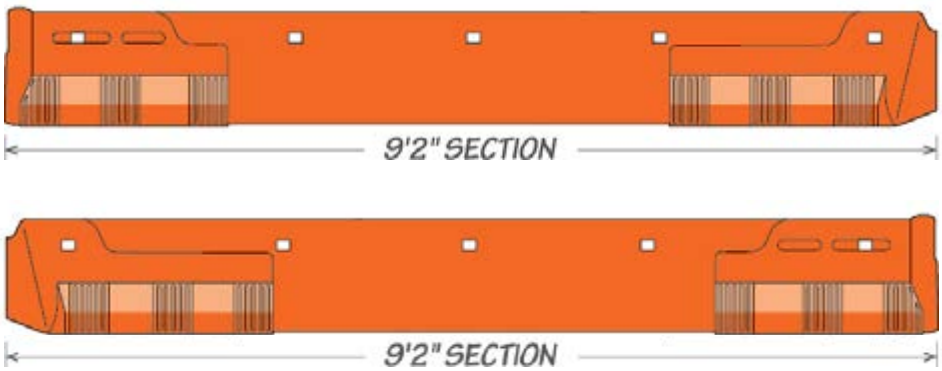

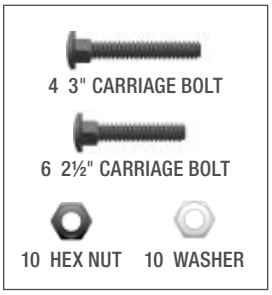

BOLT KIT INCLUDES


IMPORTANT!

The moldboard mounting surface must be clean of all foreign material prior to installing new blades and hardware to avoid issues with bolt loosening while in service.

- For torque recommendation, please refer to SAE J1701
- Re-torque hardware after the first 10 plow hours


Step 1

Clear moldboard of all foreign material before mounting blade sections with provided mounting hardware kit. Then install the Vulcan for DXT cutting edge.

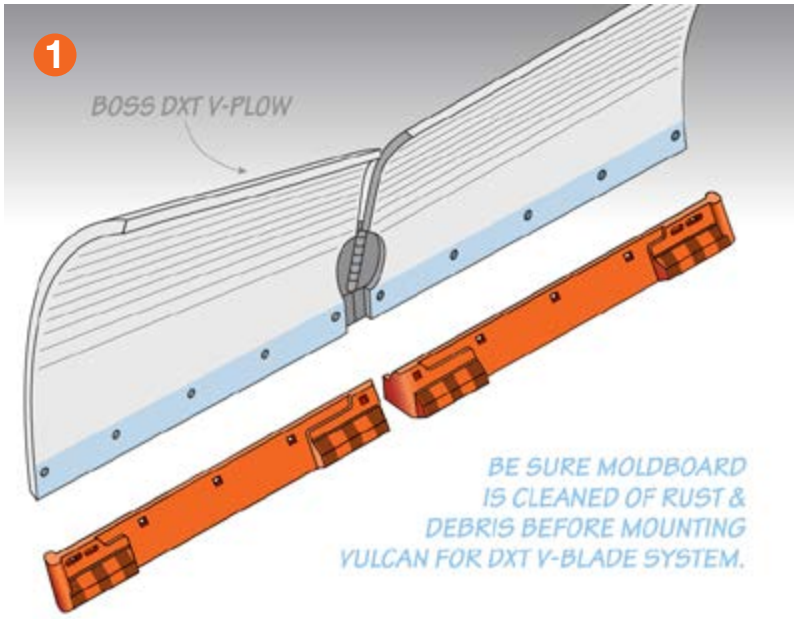

Step 2


Mount Vulcan for DXT blade using two 3" carriage bolts on each end of the blade and three 2½" carriage bolts in the middle. Hand tighten.

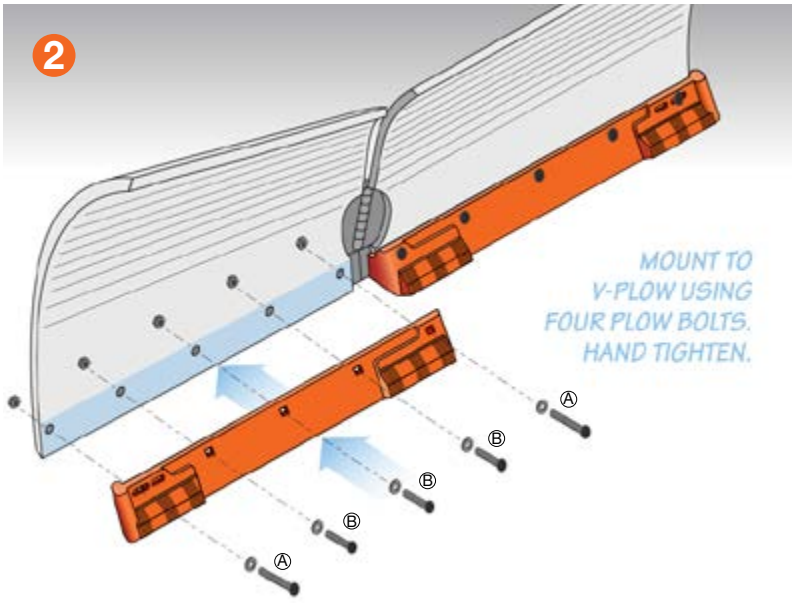

THIS STEP USES: 4 3" CARRIAGE BOLT Ⓐ 6 2½" CARRIAGE BOLT Ⓑ 10 HEX NUT 10 WASHER

Step 3

Lower V-plow to ground, applying small amount of down pressure to ensure blade is fully touching the ground – then fully tighten all bolts.

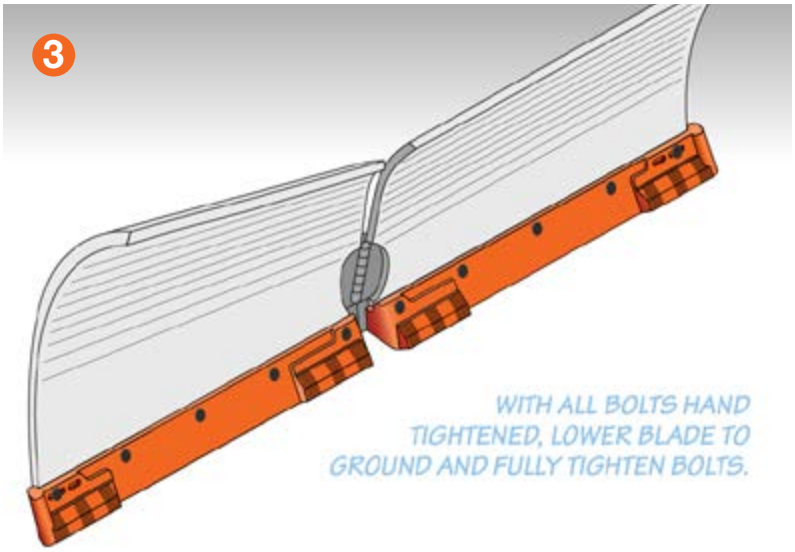

Re-torque hardware after the first 10 plow hours

WARNING!

Enclosed hardware package must be utilized or the WARRANTY is invalid