
INSTALLATION INSTRUCTIONS

Valkyrie® Perforated Cutting Edge System

PARTS INCLUDED

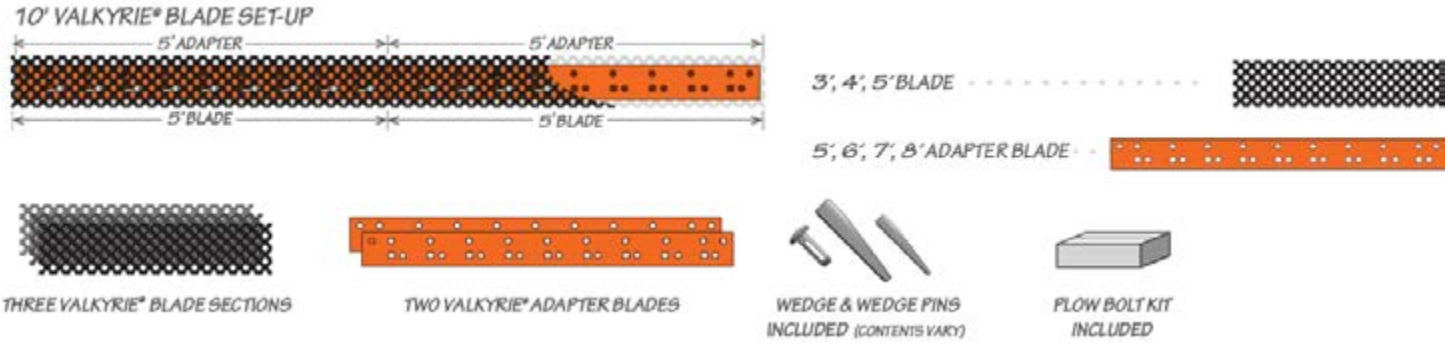


IMPORTANT!

The moldboard mounting surface must be clean of all foreign material prior to installing new blades and hardware to avoid issues with bolt loosening while in service.

- For torque recommendation, please refer to SAE J1701
- Re-torque hardware after the first 10 plow hours


Step 1

Clear moldboard of all foreign material before mounting, then install the Valkyrie Adapter Blade to the moldboard with 2" or 2.5" Plow Bolts included (varies with your set-up).

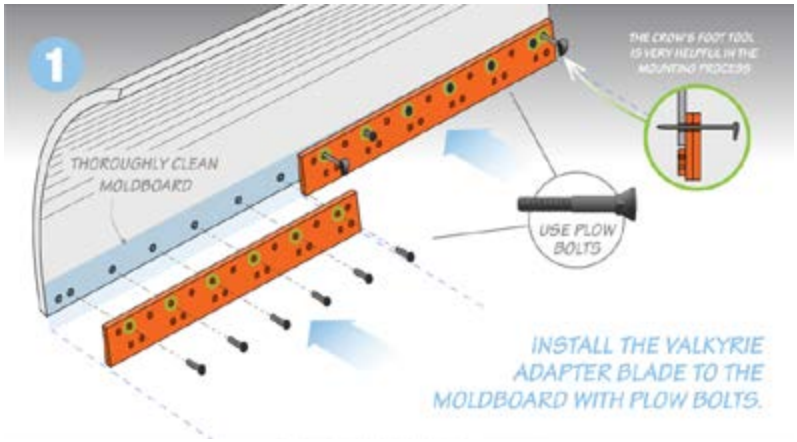


Step 2

Insert Wedge Bolts through back of Adapter Blade & through the Valkyrie Perforated Blade. Slide Wedge Pin through Wedge Bolt to hold Valkyrie Blade in place.

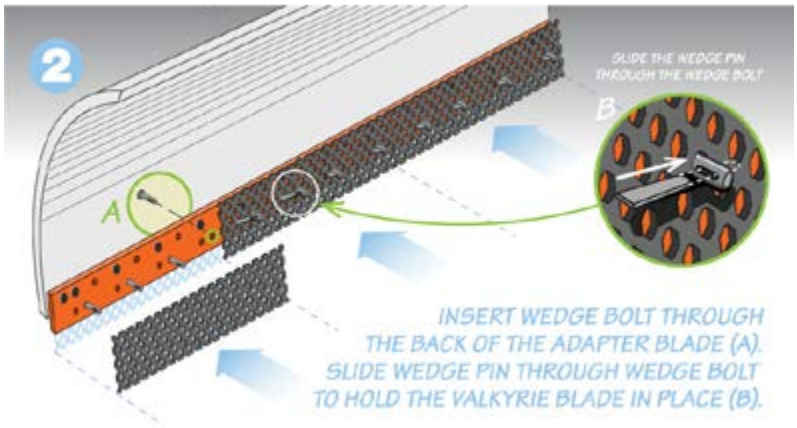

Step 3

Secure a tight fit by firmly hammering the Wedge Pins into the Wedge Bolts. Check Wedge Pin tightness regularly during operation.

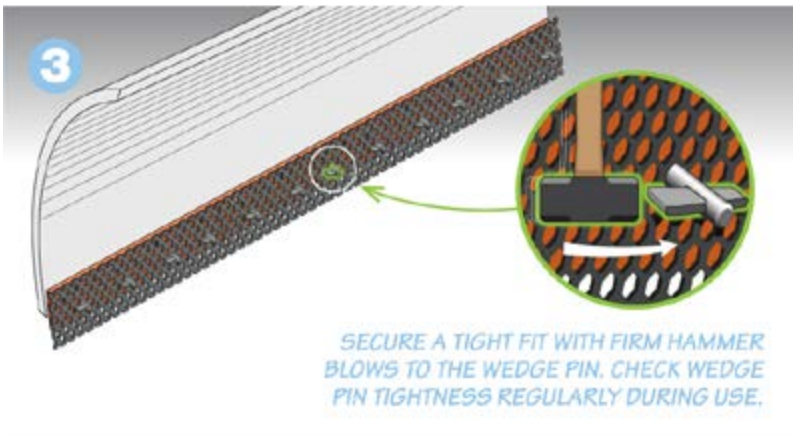

SECURE A TIGHT FIT WITH FIRM HAMMER BLOWS TO THE WEDGE PIN. CHECK WEDGE PIN TIGHTNESS REGULARLY DURING USE.

Check Wedge Pin tightness regularly during operation

WARNING!

Enclosed hardware package must be utilized or the WARRANTY is invalid