
INSTALLATION INSTRUCTIONS

Common Sense® HD Cutting Edge System

PARTS INCLUDED

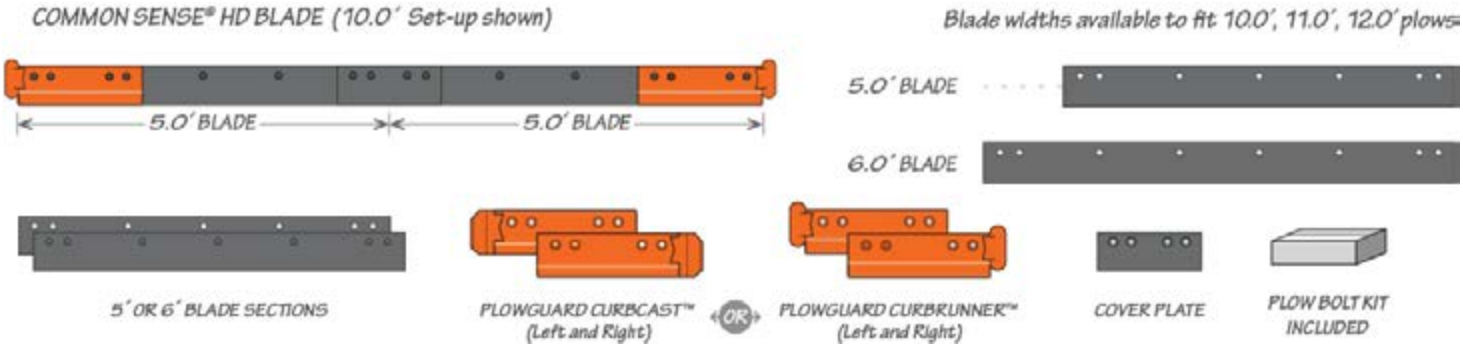


IMPORTANT!

The moldboard mounting surface must be clean of all foreign material prior to installing new blades and hardware to avoid issues with bolt loosening while in service.

- For torque recommendation, please refer to SAE J1701
- Re-torque hardware after the first 10 plow hours


Step 1

Clear moldboard of all foreign material before mounting Common Sense® blade sections with the 3" Grade 8 plow bolts in the provided mounting hardware kit. Hand tighten. Leave the outside bolt holes empty for Step 2.

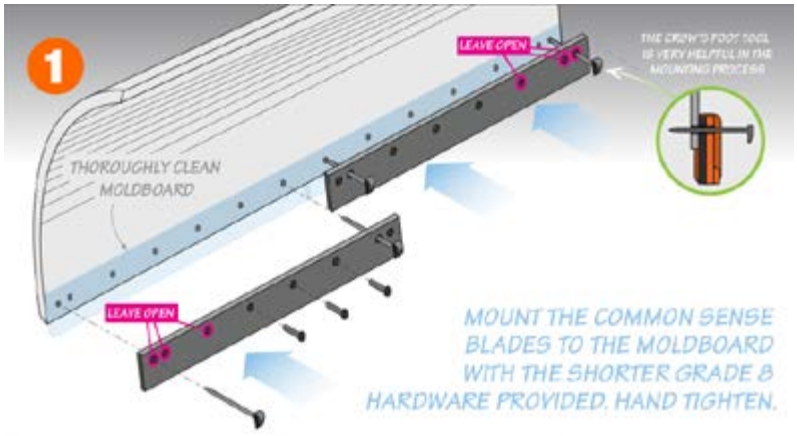


Step 2

Install drivers- and passengers-side PlowGuard CurbRunner® or PlowGuard CurbCast® curb guards with the 3.5" Grade 8 plow bolts. Hand tighten. Leave the four bolt holes in the center of the plow – where the left and right blades meet – empty for Step 3.

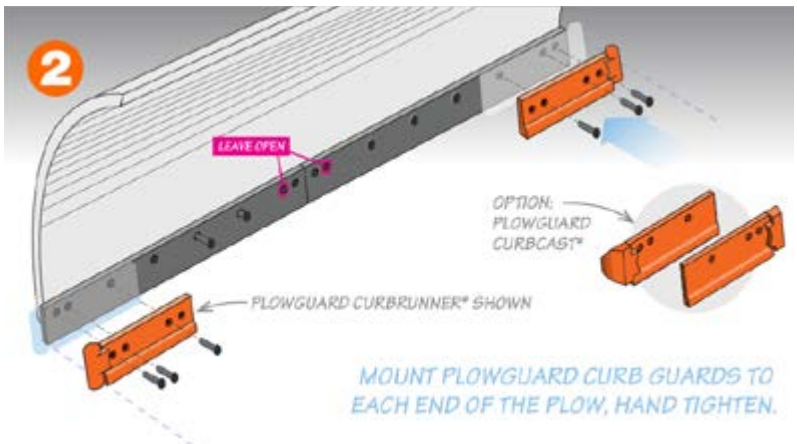

Step 3

Install the Cover Plate in the center where the blades meet with 3.5" Grade 8 plow bolts included. Hand tighten.

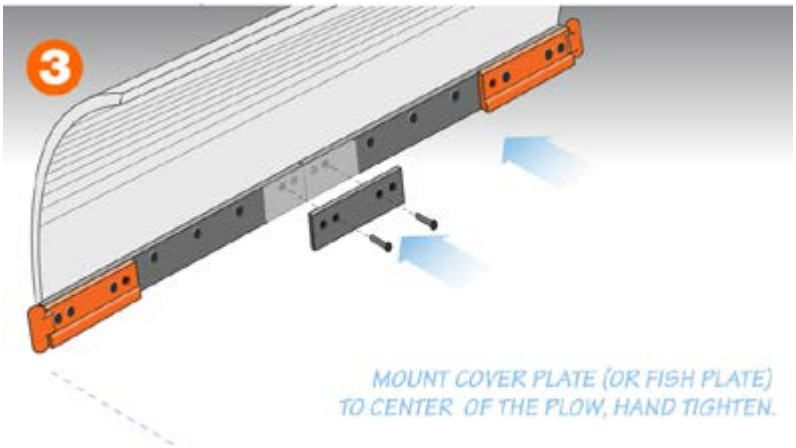

Step 4

Set entire assembly on ground to ensure it's level.

Fully tighten all bolts. For torque specification, please refer to SAE J1701.



Re-torque hardware after the first 10 plow hours

WARNING!

Enclosed hardware package must be utilized or the WARRANTY is invalid